

Product Description

© 2013 Rapidrop
Rapidrop is a registered trademark.
Rapidrop Global Limited
Registered in England No. 5503278

Rapidrop Global
Rutland House, 125 Newmark Road, Newbury, Berkshire, RG13 2PW, United Kingdom
Tel: +44 (0) 1733 847 510 Fax: +44 (0) 1733 553 958
e-mail: rapidrop@rapidrop.com web: www.rapidrop.com

  
Ref. 566/d EN 12259-1




Design Coverage:


For sprinkler coverage area and placement refer to NFPA 13 standards or other installation rules for automatic sprinkler systems as required by the authority having jurisdiction. The following details are provided for information only.

RD020, RD021 and RD030

Conventional for installing in pendent or upright position giving a spherical discharge with a proportion of water being thrown upwards towards the ceiling.

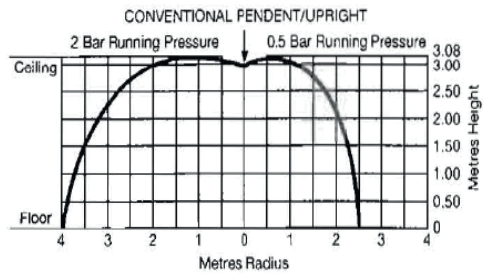


Minimum Operating Pressure = 7psig (0.5 Bars)
Flow Characteristics

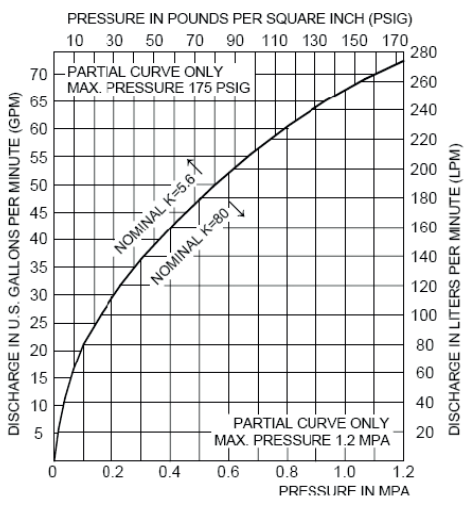



RD022, RD023 and RD031

Spray Pendent for installing only in pendent position giving hemispherical discharge below the deflector with little or no water being discharged upwards

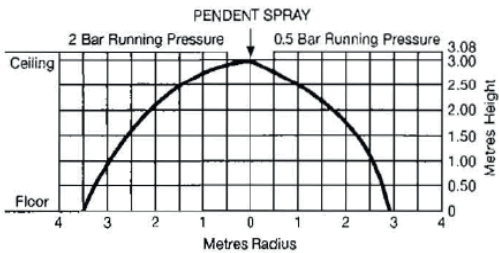


RD024, RD025 and RD032


Spray Upright for installing only in upright position giving hemispherical discharge below the deflector with little or no water being discharged upwards.

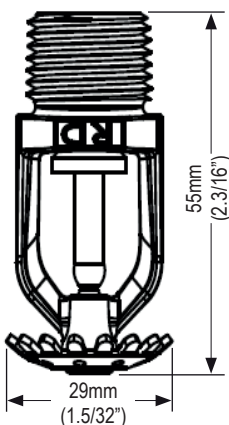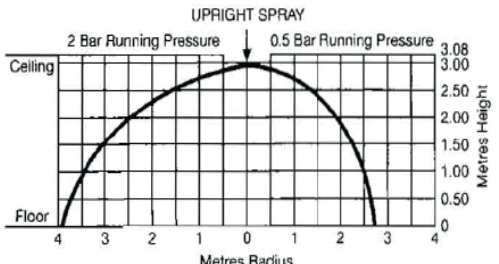

RD020, RD021 & RD030
CUP & QR CUP
Figure A

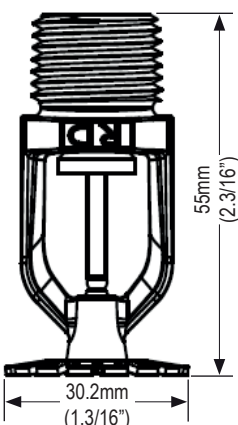

RD022, RD023 & RD031
SSP & QR SSP
Figure B

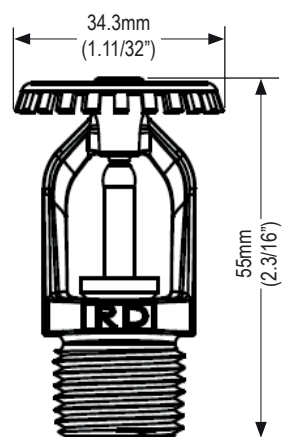

RD024, RD025 & RD032
SSU & QR SSU
Figure C

*Bulb sizes shown for reference only

Installation:

1. All Rapidrop sprinklers must be installed and maintained in compliance with this document and according to the installation standards, EN 12845, or local rules and requirements which are specified by the authority having jurisdiction. It is the installer's responsibility to conform to such standards and requirements, deviations from the requirements will void any warranty.
2. To ensure that the minimum flow requirement is met, the system piping must be correctly sized.
3. To avoid mechanical damage the sprinklers must be installed after the piping is in place. Any damaged sprinklers must be replaced. If there is a leak from the sprinkler thread, remove the sprinkler, apply new pipe joint compound or tape and re-install.
4. Always check that the sprinklers are the correct model, style, orifice size, temperature and sensitivity ratings prior to commencing installation.
5. Upright sprinklers must be mounted in upright position and Pendent sprinklers must be mounted in pendent position.
6. Use only non-hardening pipe joint compound or 'Teflon' tape. Apply to external threads only.
7. Hand tighten the sprinkler into the fitting, then use the correct sprinkler wrench (Rapidrop Series 20 – See Figure D) to tighten the sprinkler into the fitting. Ensure that the sprinkler wrench stays on the wrench flats while tightening the sprinkler. A leak tight joint requires only 9.5 to 19 Nm (7 to 14 ft.lbs.) torque. i.e. A tangential force of 6.35 to 12.7kgs. (14 to 28 lbs.) delivered through a 150mm (6") handle will deliver adequate torque. Torque levels over 29Nm (21 ft.lbs.) may distort the orifice seal and result in leakage.
8. Remove sprinkler bulb protector before the sprinkler system is put into service.

Care and Maintenance:

Sprinklers must be carefully handled and stored where temperatures will not exceed 100°F/38°C and they must never be painted, plated, coated or otherwise modified after leaving the factory.

Do not install sprinklers which have been dropped or damaged in any way.

The installation rules required by the authority having jurisdiction contain guidelines on minimum inspection and maintenance requirements to assist owners fulfilling their responsibility to ensure sprinklers and sprinkler systems are maintained in proper operating condition.

Warranty:

Warranty period is one year from the date of shipment. For full details please refer to our terms and conditions of sale.

Ordering Information:

Specify: model, orifice size, style, temperature, response, finish and approval listing required. Always order and use a Series 20 Wrench for installing these sprinklers.

