

## Fig 503 Deluge Valve

### TECHNICAL DATA

|                                       |   |
|---------------------------------------|---|
| MODEL                                 | 503 - Nickel Aluminium Bronze   |
| NORMAL SIZE                           | 200,150,100, 80, 50 NB  |
| SEVICE PRESSURE                       | 1.4 to 17.5 Bar<br>(20 to 250 PSI)  |
| THREADED OPENING                      | BSPT  |
| MOUNTING                              | Vertical or Horizontal  |
| FACTORY HYDOSTATIC TEST PRESSURE      | 35 Kg/sq.cm. (500 PSI)  |
| FLANGE CONNECTION                     | ANSI B 16.5 # 150 FF  |
| WET PILOT SPRINKLER HEIGHT LIMITATION | As per graph in the catalogue   |
| NET WEIGHT                            | 200 NB - 154 Kg   |
| WIHTOUT TRIM                          | 150 NB - 82 Kg  |
|                                       | 100 NB - 55 Kg  |
|                                       | 80 NB - 36 Kg   |
|                                       | 50 NB - 31 Kg   |
| FINISH                                | RAL 3000  |
| APPROVAL                              | UL Listed   |
| ORDERING INFORMATION                  | 1. Size of Valve<br>2. Flange specification<br>3. Valve trim vertical or horizontal<br>4. Trim type |

### DESCRIPTION

Deluge Valve is known as a system control valve in a deluge system, used for fast application of water in a spray system. Deluge valve protects areas such as power transformer installation, storage tank, conveyor protection and other industrial application etc. With the addition of foaming agent deluge valve can be used to protect aircraft hangar and inflammable liquid fire.

### VALVE OPERATION

Fig 503 Deluge valve is a quick release, hydraulically operated diaphragm valve. It has three chambers, isolated from each other by the diaphragm operated clapper and seat seal. While in SET position, water pressure is transmitted through an external bypass check valve and restriction orifice from the system supply side to the top chamber, so that supply pressure in the top chamber act across the diaphragm operated clapper which holds the seat against the inlet supply pressure because of the differential pressure design.



On detection of fire the top chamber is vented to atmosphere through the outlet port via opened actuation devices. The top chamber pressure cannot be replenished through the restricted inlet port, and the upward force of the supply pressure lifts the clapper allowing the water flow to the system piping network and alarm devices.

### TRIM DESCRIPTION

The trims are functionally termed as Dry Pilot Trim, Wet Pilot Trim, Electric Trim and Test and Alarm Trim as per the method of actuation of the deluge valve.

The functionality of these trims is described below.

#### a) DRY PILOT TRIM (PNEUMATIC RELEASE)

Dry pilot operation uses a pilot line of closed Sprinkles/QB detectors containing air under pressure, located in the area to be protected. It requires regulated dry air supply with main supply point through restricted orifice. The air pressure to be maintained as specified in the catalogue of Dry Pilot Actuator. The pilot line is connected to air inlet side of actuator. The top chamber of the deluge valve is connected to water inlet side of actuator. When there is an air pressure drop, or due to release of any of the release device on detection of fire, the diaphragm of actuator is lifted and allows the water to drain. This releases the water pressure in the top chamber of the deluge valve, allowing the deluge valve to open and water to flow into the system piping & alarm devices. Recommended air supply pressure for dry pilot trim system is 3.5 kg/sq.cm.

User must install non return valve at air supply connection to deluge valve trim.





## Fig 503 Deluge Valve

In dry pilot trim, an actuator (DPA) is provided. An optional Pneumatic Reset Device (PRD) can be provided, which acts as a manual reset device in the dry pilot line.

### b) WET PILOT TRIM (HYDRAULIC RELEASE)

Wet pilot operation uses a pilot line of closed Sprinklers/ QB Detectors containing pressurized water, supplied through the upstream side of the Deluge valve, through a restricted orifice. All the release lines are connected to a common release line. Due to release of any one of the release device, the water pressure in the top chamber of the Deluge valve drops and the Deluge valve opens.

### c) ELECTRIC RELEASE TRIM

To actuate a Deluge valve electrically, a solenoid valve is provided to drain the water from the top chamber of the Deluge valve. A pressure switch is provided to activate an electric alarm, to shut down the desired equipment or to give "Tripped" indication of the Deluge valve. In addition to this a pressure switch can also monitor "Low air pressure" and "Fire condition" when used in dry pilot airline.

### d) TEST AND ALARM TRIM

This trim is supplied with a test valve is provided to test the normal operation of the sprinkler alarm bell. The sprinkler alarm can be supplied additionally, which bells on actuation of the Deluge valve.

### e) DRAIN AND DRIP TRIM

This consists of main and system drain valve in addition with drip valve.

### TRIM TYPES

The trims are designated as following.  
W = Wet Pilot trim. D = Dry Pilot Trim

#### a) Type ET-W and ET-D

This type of trim is basic trim required to operate the deluge valve. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

#### b) Type ETW-D and ETD-D

This trim type is a combination of components of the ET trim along with the drip and drain trim. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

#### c) Type ETW-T and ETD-T

This trim type is a combination of components of the ET trims along with the test and alarm trim. In dry pilot trim, an actuator DPA-H1 is provided with optional Pneumatic Reset Device (PRD-1). A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

#### d) Type NT-W and NT-D

This trim type is a combination of components of the ET trim along with the test and alarm trim as well as the drip and drain trim. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

| TRIM MODEL NO. | TRIM DESCRIPTION  | MOUNTING   | SCHEMATIC NO. |
|----------------|---|------------|---------------|
| ETW            | Basic Wet Pilot Trim  | Vertical   | Schematic 1   |
| ETD            | Basic Dry Pilot Trim  | Vertical   | Schematic 2   |
| ETW-T          | Basic Wet Pilot Trim with Test & Alarm Trim                       | Vertical   | Schematic 3   |
| ETD-T          | Basic Dry Pilot Trim with Test & Alarm Trim                       | Vertical   | Schematic 4   |
| ETW-D          | Basic Wet Pilot Trim with Drip & Drain Trim                       | Vertical   | Schematic 5   |
| ETD-D          | Basic Dry Pilot Trim with Drip & Drain Trim                       | Vertical   | Schematic 6   |
| NTW            | Basic Wet Pilot Trim with Test & Alarm Trim and Drip & Drain Trim | Vertical   | Schematic 7   |
| NTD            | Basic Dry Pilot Trim with Test & Alarm Trim and Drip & Drain Trim | Vertical   | Schematic 8   |
| ETW            | Basic Wet Pilot Trim  | Horizontal | Schematic 9   |
| ETD            | Basic Dry Pilot Trim  | Horizontal | Schematic 10  |
| ETW-T          | Basic Wet Pilot Trim with Test & Alarm Trim                       | Horizontal | Schematic 11  |
| ETD-T          | Basic Dry Pilot Trim with Test & Alarm Trim                       | Horizontal | Schematic 12  |
| ETW-D          | Basic Wet Pilot Trim with Drip & Drain Trim                       | Horizontal | Schematic 13  |
| ETD-D          | Basic Dry Pilot Trim with Drip & Drain Trim                       | Horizontal | Schematic 14  |
| NTW            | Basic Wet Pilot Trim with Test & Alarm Trim and Drip & Drain Trim | Horizontal | Schematic 15  |
| NTD            | Basic Dry Pilot Trim with Test & Alarm Trim and Drip & Drain Trim | Horizontal | Schematic 16  |



## Fig 503 Deluge Valve

### RESETTING PROCEDURE FOR DELUGE VALVE

- Close the upstream side stop valve provided below the deluge valve to cease the flow of water.
- Open both the drain valves/ drain plugs and close when the flow of water has ceased.
- Close the release device/replace the Sprinkler if release was through Sprinkler/ QB Detector.
- Inspect and release if required, or close the section of the detection system subjected to "Fire condition".
- In case of dry pilot detection system, open the air supply valve to build-up air pressure. Open the priming valve fully. Open the upstream side of the stop valve provided below the Deluge valve. No water should flow into the system.
- Where priming shut off valve (optional) is provided for resetting, then the water need to be drained from upstream side of valve.

#### NOTE :

The valve can be reset without undergoing above procedure, by just closing/replacing the release device as valve is auto reset type. The reset time may be long or cause vibration while closing depending on back pressure at the outlet of the valve.

### CAUTION

- Do not close the downstream and upstream stop valves, while the system is in service.
- The releasing device must be maintained in open position, when actuated, to prevent the deluge valve from closure if anti shut off valve is not provided.
- While using a Deluge valve in the wet pilot system, the height and length of the wet pilot detection line is to be limited, as shown in the wet pilot sprinkler height limitation graph.
- Do not connect the Sprinkler Alarm outlet drain line to close a common drain as it may create back pressure and Sprinkler Alarm may not function.
- Deluge valve must have support to absorb sudden opening or closing vibration shock to the piping.
- To avoid water damage, take precautions when opening the water supply main control valve, since water will flow from all open system valves.

- The responsibility of maintenance of the protection system & devices in proper operating condition lies with the owner of the system.
- Deluge Valve & its trim shall be maintained at a minimum temperature of 4°C, Heat tracing is not permitted.
- Deluge Valve must be used in pressurised system

### SYSTEM TESTING PROCEDURE

- Keep the upstream side of the stop valve partially open. To avoid water flow to system side close the system side stop valve. This valve is to be kept in open position after the testing is completed.
- Let any of the release devices to trip. This will result in sudden drop of water pressure in the deluge valve top chamber which in turn will open the deluge valve. Close the upstream side stop valve immediately.
- Reset the valve as per the procedure given under heading "RESETTING PROCEDURE FOR THE DELUGE VALVE".

### INSPECTION AND MAINTENANCE

Installed system piping network must be flushed properly before placing the Deluge valve in service. A qualified and trained person must commission the system. After few initial successful tests, an authorized person must be trained to perform inspection and testing of the system. It is recommended to have regular inspection and test run of the system as per NFPA guideline or in accordance to the organisation having local jurisdiction.

#### (i) WARNING

Inspection and testing is to be carried out only by authorised and trained personnel. DO NOT TURN OFF the water supply or close any valve to make repair(s) or test the valve, without placing a roving fire patrol in the area covered by the system. Also inform the local security personnel and central alarm station, so that there is no false alarm signal.

It is recommended to carry out physical inspection of the system at least twice in a week. The inspection should verify that all the control valves are in proper position as per the system requirement and that there are no damages to any component. The frequency of inspections must be increased in the presence of contaminated water supplies, corrosive/ scaling water supplies, and corrosive atmospheres.





## Fig 503 Deluge Valve

### (ii) NORMAL CONDITION

- (a) All main valves are open and are sealed with tamper proof seal
- (b) Drain valves must be kept closed
- (c) No leak or drip is detected from the drip valve
- (d) All the gauges except the system side water pressure gauge, should show the required pressure
- (e) There should be no leakage in the system

### (iii) NORMAL CONDITION TEST

- (a) The system should be checked for normal condition at least once in a week
- (b) Test the sprinkler alarm bell or electric alarm by turning the alarm test valve to the test position. The alarm should sound. This test should be carried out at least once in a week
- (c) Depress the drip valve knob. Significant accumulation indicates a possible seat leakage
- (d) Conduct the water flow test as per the procedure of system testing at least once a month.

### (iv) PERIODIC CHECK

Conduct the water flow test by actuating few of the release devices provided in the system. Clean all strainer(s) and priming line restriction. This test is to be carried out at least once in three months.

## ABNORMAL CONDITION

### (i) ALARM FAILS TO SOUND

- (a) Check for any obstruction in the alarm test line, make certain that the sprinkler alarm is free to operate
- (b) If an electric alarm is provided, check the electrical circuitry to the alarm

### (ii) FALSE TRIPS

- (a) Check for clogging in priming line, restriction orifice check valve, priming valve & strainer
- (b) Leakage in the release system
- (c) The deluge air panel orifice clogged or low supply pressure


### (iii) LEAKAGE THROUGH THE DELUGE VALVE

- (a) Damaged deluge valve seat or obstruction on the seat face by foreign object
- (b) Leakage in release system
- (c) Partly clogged priming line restriction orifice check valve
- (d) Low air pressure on release system line or leakage in release system



### Fig 503 Deluge Valve

DELUGE VALVE MODEL - Fig 503 SIZE 200 / 150 / 100 / 80/ 50 NB

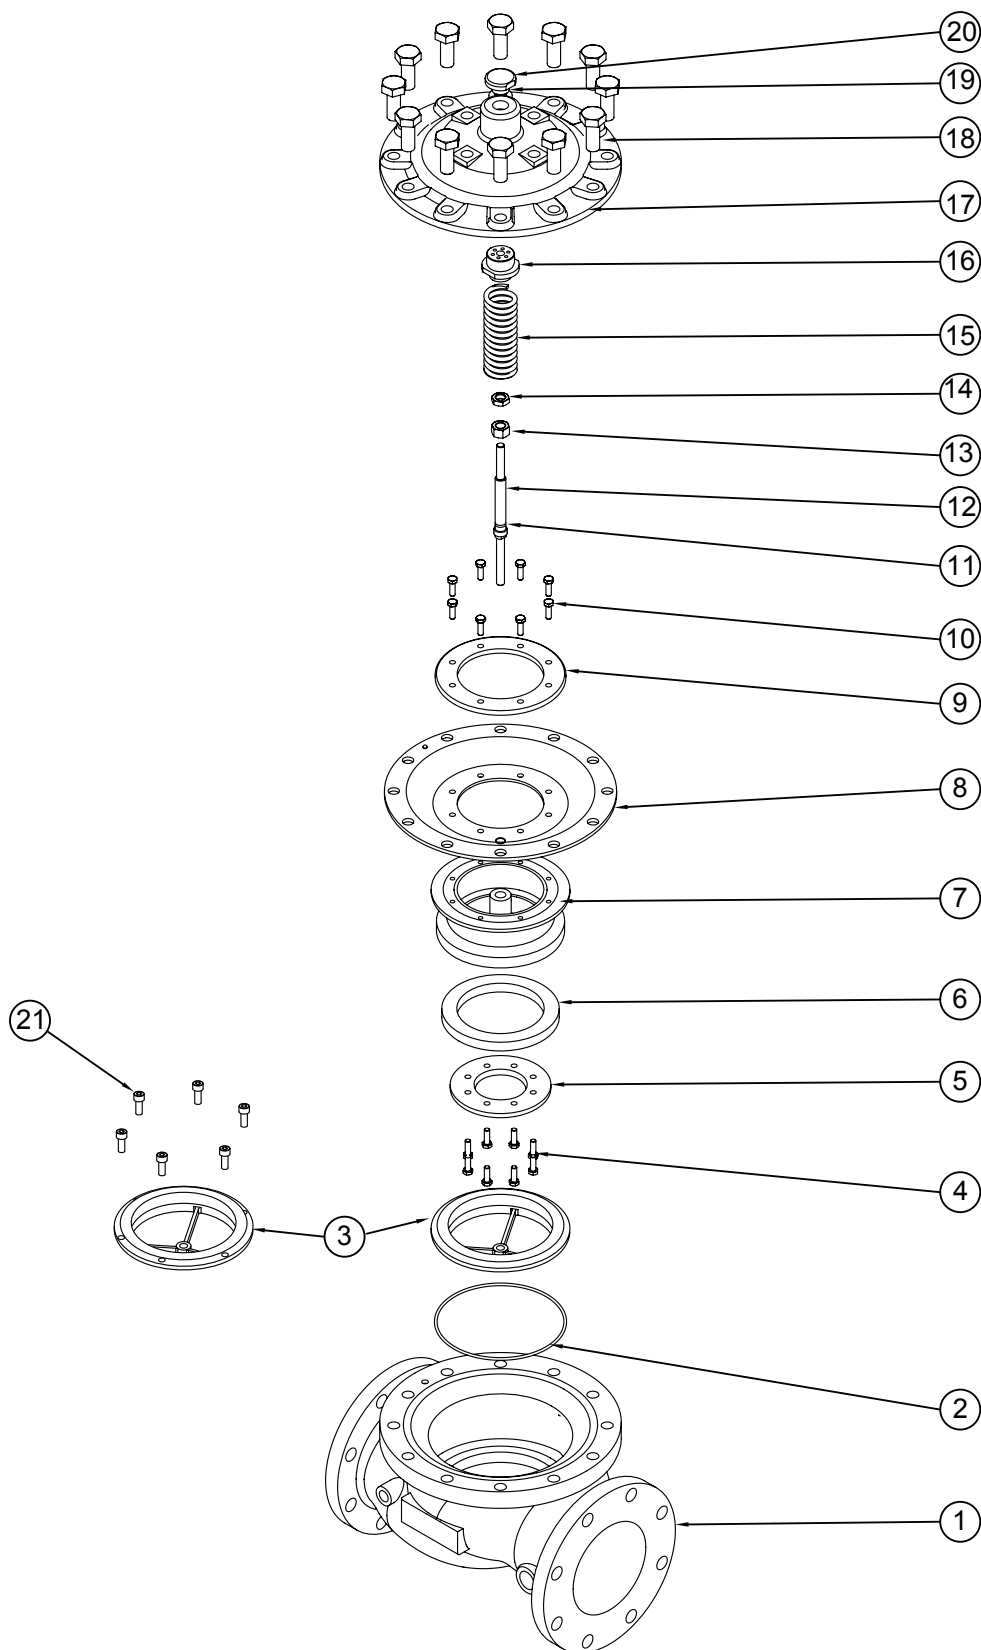

Rapidrop Global

Rutland Business Park, Newark Road, Peterborough, PE1 5WA, United Kingdom


Tel: +44 (0) 1733 847 510 Fax: +44 (0) 1733 553 958

e-mail: [rapidrop@rapidrop.com](mailto:rapidrop@rapidrop.com) web: [www.rapidrop.com](http://www.rapidrop.com)



## Fig 503 Deluge Valve

**DELUGE VALVE MODEL - Fig 503 SIZE 200 / 150 / 100 / 80/ 50 NB**

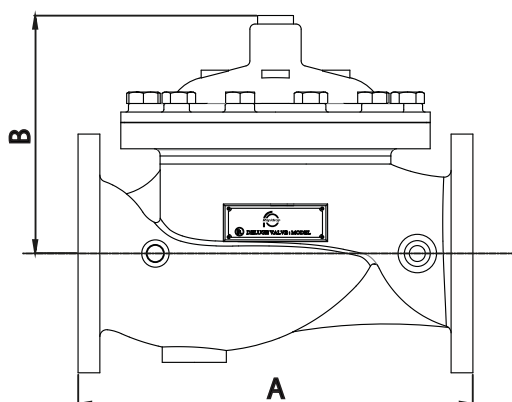

**DIMENSION** in millimeter (Approximate)

| VALVE NOMINAL SIZE | A   | B   |
|--------------------|-----|-----|
| 200 NB             | 552 | 332 |
| 150 NB             | 462 | 282 |
| 100 NB             | 412 | 245 |
| 80 NB              | 372 | 232 |
| 50 NB              | 320 | 232 |


| ITEM NO. | PART NO. |        |        |       |       | DESCRIPTION  | QTY    |        |        |          | MATERIAL SPECIFICATION   |
|----------|----------|--------|--------|-------|-------|--------------|--------|--------|--------|----------|--------------------------|
|          | 200 NB   | 150 NB | 100 NB | 80 NB | 50 NB |              | 200 NB | 150 NB | 100 NB | 80/50 NB |                          |
| 1        | 4151     | 3911   | 3951   | 3971  | 3965  | HOUSING      | 1      | 1      | 1      | 1        | AL. BRONZE BS 1400 - AB2 |
| 2        | 8561     | 9783   | 9784   | 9791  | 9791  | "O" RING     | 1      | 1      | 1      | 1        | NEOPRENE RUBBER          |
| 3        | 4155     | 3925   | 3955   | 3986  | 3986  | SEAT         | 1      | 1      | 1      | 1        | AL. BRONZE BS 1400 - AB2 |
| 4        | 9898     | 9899   | 9899   | -     | -     | BOLT         | 8      | 4      | 4      | -        | MONEL 400                |
| 5        | 4156     | 3926   | 3956   | 3984  | 3984  | RUBBER CLAMP | 1      | 1      | 1      | 1        | AL. BRONZE BS 1400 - AB2 |
| 6        | 4027     | 4000   | 4005   | 4023  | 4023  | RUBBER SEAT  | 1      | 1      | 1      | 1        | NEOPRENE RUBBER          |
| 7        | 4153     | 3927   | 3953   | 3985  | 3985  | CLAPPER      | 1      | 1      | 1      | 1        | AL. BRONZE BS 1400 - AB2 |
| 8        | 4035     | 2427   | 2507   | 2786  | 2786  | DIAPHRAGM    | 1      | 1      | 1      | 1        | NEOPRENE RUBBER          |
| 9        | 4158     | 3918   | 3958   | 3978  | 3978  | CLAMP RING   | 1      | 1      | 1      | 1        | AL. BRONZE BS 1400 - AB2 |
| 10       | 9842     | 9898   | 9898   | 9898  | 9898  | BOLT         | 12     | 8      | 8      | 8        | MONEL 400                |
| 11       | 9986     | 9986   | 9986   | 9986  | 9986  | "O" RING     | 1      | 1      | 1      | 1        | NEOPRENE RUBBER          |
| 12       | 4157     | 3917   | 3957   | 3977  | 3977  | SPINDLE      | 1      | 1      | 1      | 1        | MONEL 400                |
| 13       | 9896     | 9896   | 9896   | 9896  | 9896  | NUT          | 1      | 1      | 1      | 1        | MONEL 400                |
| 14       | 9897     | 9897   | 9897   | 9897  | 9897  | LOCK NUT     | 1      | 1      | 1      | 1        | MONEL 400                |
| 15       | 4154     | 3914   | 3954   | 3974  | 3974  | SPRING       | 1      | 1      | 1      | 1        | INCONEL-X-750            |
| 16       | 4159     | 3919   | 3959   | 3979  | 3979  | ADAPTOR      | 1      | 1      | 1      | 1        | AL. BRONZE BS 1400 - AB2 |
| 17       | 4152     | 3912   | 3952   | 3972  | 3972  | COVER        | 1      | 1      | 1      | 1        | AL. BRONZE BS 1400 - AB2 |
| 18       | 9841     | 9841   | 8801   | 9123  | 9123  | BOLT         | 16     | 12     | 12     | 12       | STAINLESS STEEL          |
| 19       | 9982     | 9982   | 9982   | 9982  | 9982  | "O" RING     | 1      | 1      | 1      | 1        | NEOPRENE RUBBER          |
| 20       | 3920     | 3920   | 3920   | 3920  | 3920  | PLUG         | 1      | 1      | 1      | 1        | AL. BRONZE BS 1400 - AB2 |
| 21       | 9843     | -      | -      | -     | -     | ALLEN BOLT   | 6      | -      | -      | -        | MONEL 400                |






## Fig 503 Deluge Valve

### SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR VERTICAL MOUNTING

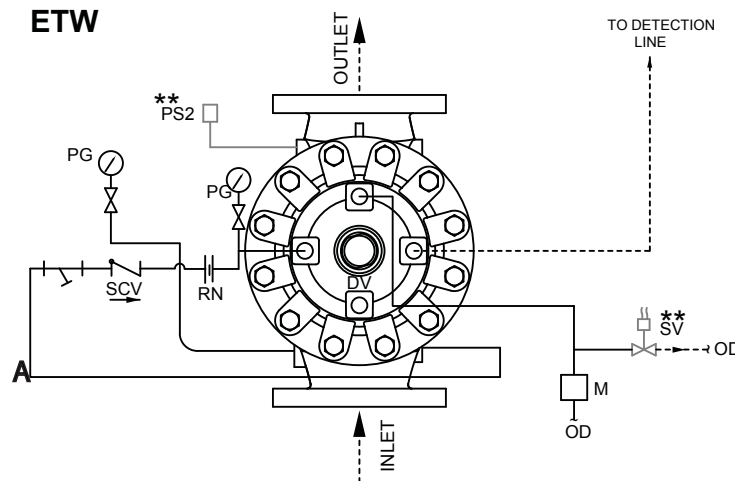

SCHEMATIC 1

### SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR VERTICAL MOUNTING

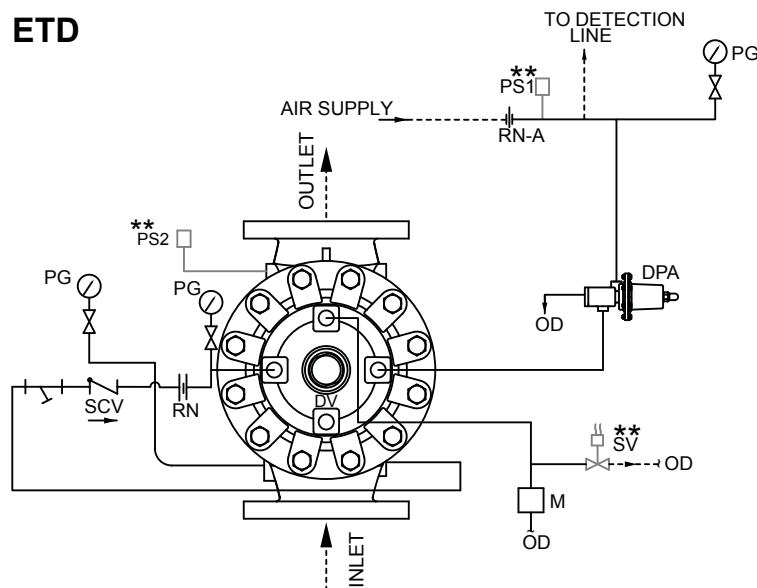

SCHEMATIC 2

#### ABBREVIATION & SYMBOLS

|     |                                   |
|-----|-----------------------------------|
| DV  | DELUGE VALVE                      |
| SV  | SOLENOID VALVE                    |
| G   | SPRINKLER ALARM (WMG)             |
| M   | EMERGENCY RELEASE STATION         |
| RN  | RESTRICTION NOZZLE (PRIMING LINE) |
| PS1 | LOW AIR ALARM PRESSURE SWITCH     |
| PS2 | WATER FLOW PRESSURE ALARM SWITCH  |


|    |                |
|----|----------------|
| —  | BY USER        |
| ** | OPTIONAL       |
| —  | STRAINER       |
| OD | OPEN DRAIN     |
| PG | PRESSURE GAUGE |

|      |                               |
|------|-------------------------------|
| —    | SWING CHECK VALVE             |
| —    | ANGLE VALVE                   |
| DPA  | DRY PILOT ACTUATOR            |
| RN-A | RESTRICTION NOZZLE (AIR LINE) |
| SCV  | SWING CHECK VALVE             |




## Fig 503 Deluge Valve

### SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR VERTICAL MOUNTING

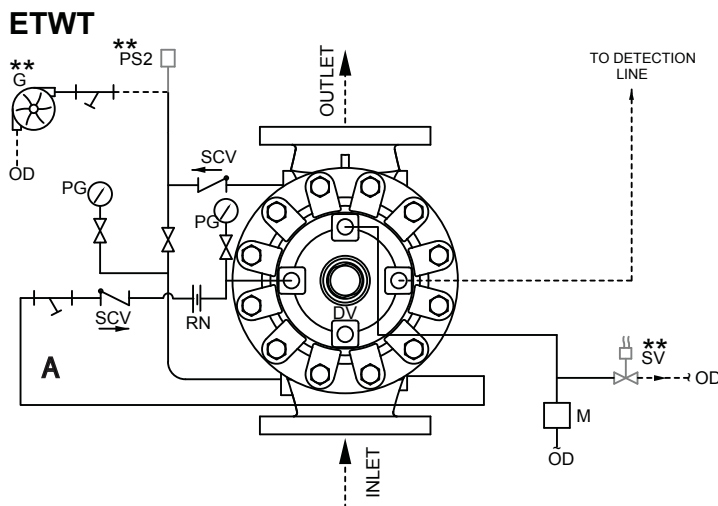

SCHEMATIC 3

### SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR VERTICAL MOUNTING

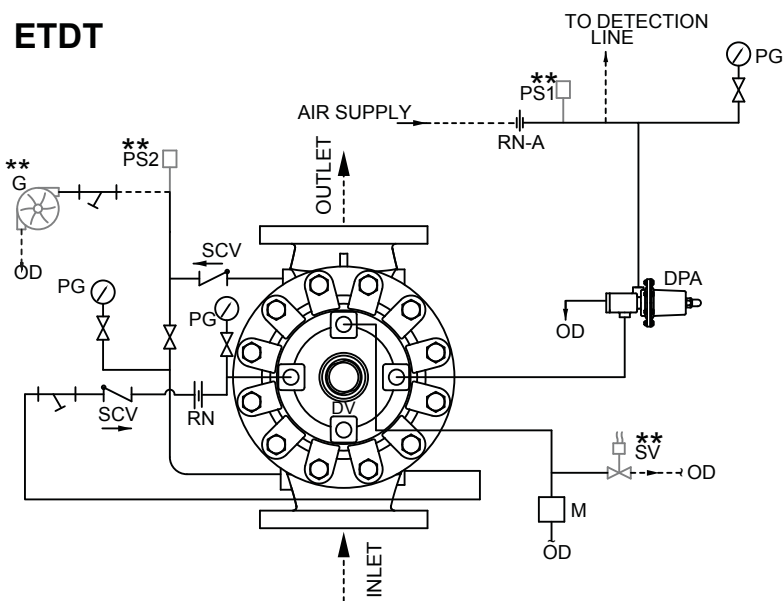

SCHEMATIC 4

#### ABBREVIATION & SYMBOLS


|     |                                   |
|-----|-----------------------------------|
| DV  | DELUGE VALVE                      |
| SV  | SOLENOID VALVE                    |
| G   | SPRINKLER ALARM (WMG)             |
| M   | EMERGENCY RELEASE STATION         |
| RN  | RESTRICTION NOZZLE (PRIMING LINE) |
| PS1 | LOW AIR ALARM PRESSURE SWITCH     |
| PS2 | WATER FLOW PRESSURE ALARM SWITCH  |

|    |                |
|----|----------------|
| —  | BY USER        |
| ** | OPTIONAL       |
| —  | STRAINER       |
| OD | OPEN DRAIN     |
| PG | PRESSURE GAUGE |

|      |                               |
|------|-------------------------------|
| —    | SWING CHECK VALVE             |
| —    | ANGLE VALVE                   |
| DPA  | DRY PILOT ACTUATOR            |
| RN-A | RESTRICTION NOZZLE (AIR LINE) |
| SCV  | SWING CHECK VALVE             |


## Fig 503 Deluge Valve

### SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR VERTICAL MOUNTING

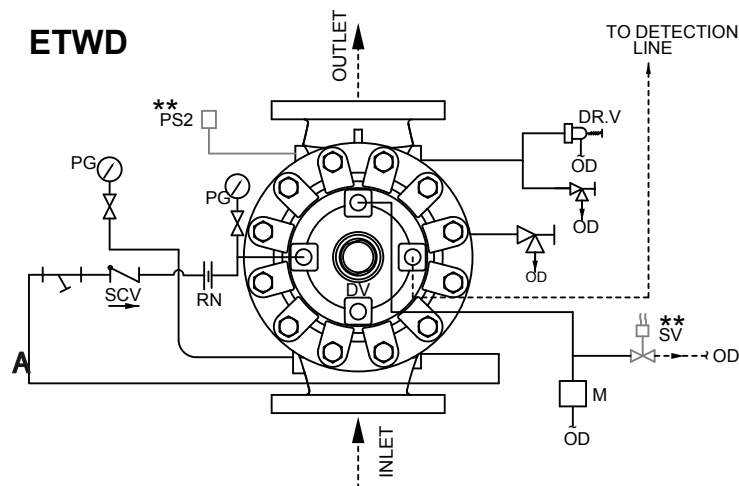

SCHEMATIC 5

### SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR VERTICAL MOUNTING

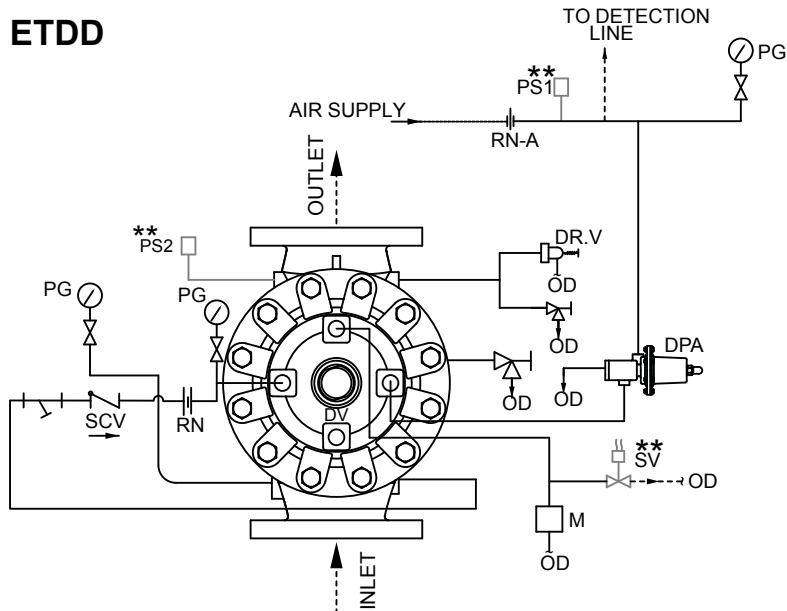

SCHEMATIC 6

DV DELUGE VALVE  
SV SOLENOID VALVE  
G SPRINKLER ALARM (WMG)  
M EMERGENCY RELEASE STATION  
RN RESTRICTION NOZZLE (PRIMING LINE)  
PS1 LOW AIR ALARM PRESSURE SWITCH  
PS2 WATER FLOW PRESSURE ALARM SWITCH


#### ABBREVIATION & SYMBOLS

VALVE  
BY USER  
OPTIONAL  
STRAINER  
OPEN DRAIN  
PRESSURE GAUGE


SWING CHECK VALVE  
ANGLE VALVE  
DRY PILOT ACTUATOR  
RESTRICTION NOZZLE (AIR LINE)  
SWING CHECK VALVE



## Fig 503 Deluge Valve

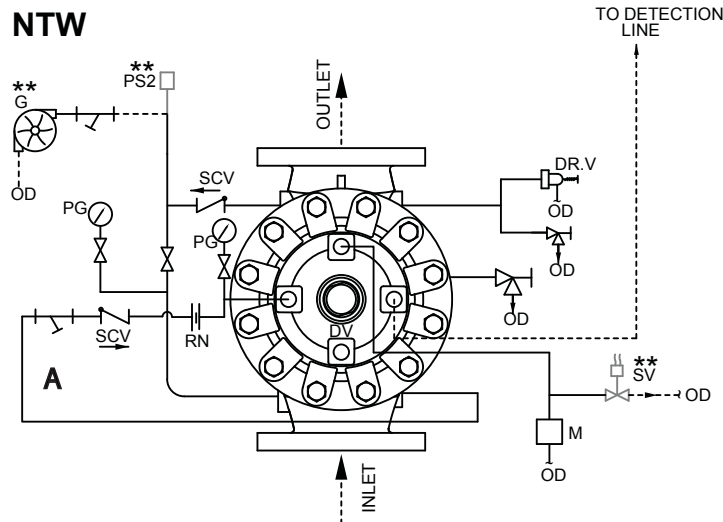**SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE  
MODEL - Fig 503 FOR VERTICAL MOUNTING**


SCHEMATIC 7

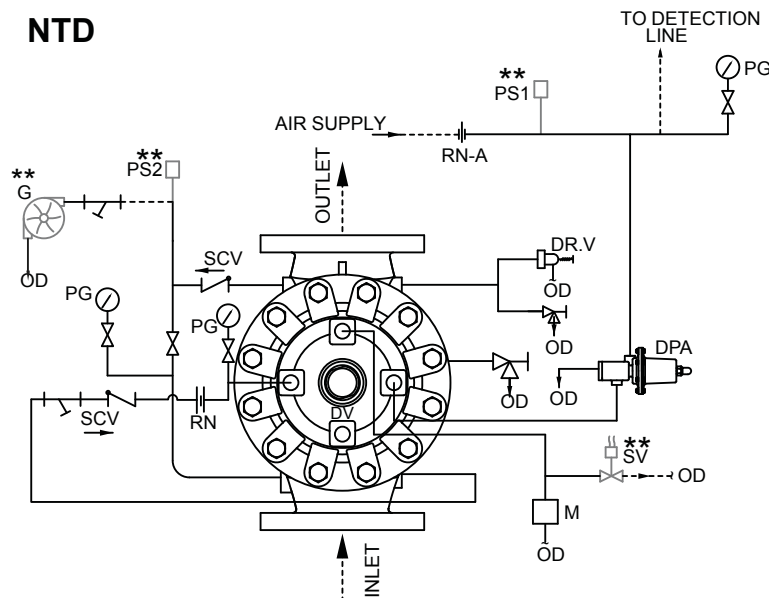**SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE  
MODEL - Fig 503 FOR VERTICAL MOUNTING**


SCHEMATIC 8

## ABBREVIATION &amp; SYMBOLS

|     |                                   |
|-----|-----------------------------------|
| DV  | DELUGE VALVE                      |
| SV  | SOLENOID VALVE                    |
| G   | SPRINKLER ALARM (WMG)             |
| M   | EMERGENCY RELEASE STATION         |
| RN  | RESTRICTION NOZZLE (PRIMING LINE) |
| PS1 | LOW AIR ALARM PRESSURE SWITCH     |
| PS2 | WATER FLOW PRESSURE ALARM SWITCH  |


|     |                |
|-----|----------------|
| ◇   | VALVE          |
| --- | BY USER        |
| **  | OPTIONAL       |
| ⊥   | STRAINER       |
| OD  | OPEN DRAIN     |
| PG  | PRESSURE GAUGE |

|      |                               |
|------|-------------------------------|
| ⋈    | SWING CHECK VALVE             |
| ⋈    | ANGLE VALVE                   |
| DPA  | DRY PILOT ACTUATOR            |
| RN-A | RESTRICTION NOZZLE (AIR LINE) |
| SCV  | SWING CHECK VALVE             |




### Fig 503 Deluge Valve

#### SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR HORIZONTAL MOUNTING

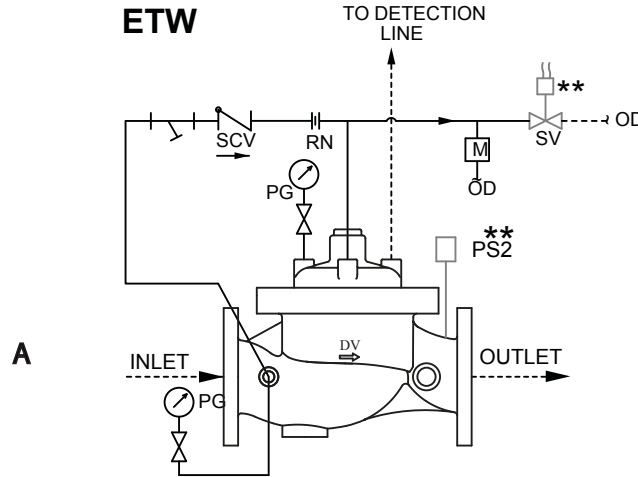

**SCHEMATIC 9**

#### SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR HORIZONTAL MOUNTING

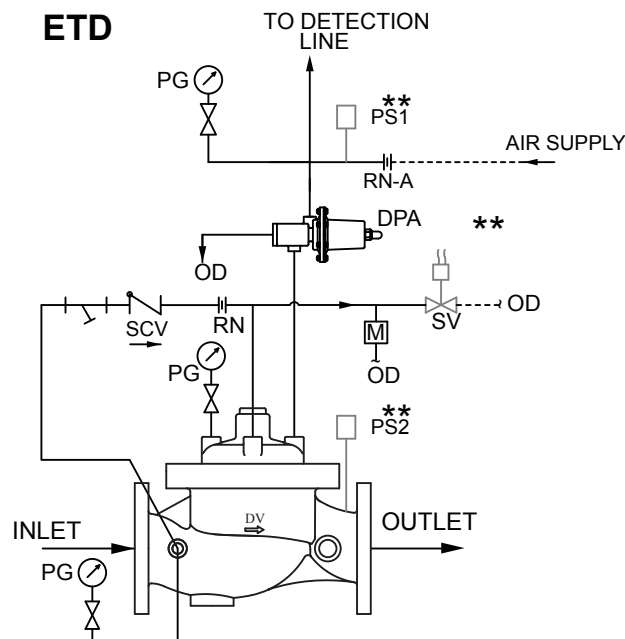

**SCHEMATIC 10**

#### ABBREVIATION & SYMBOLS

|     |                                   |
|-----|-----------------------------------|
| DV  | DELUGE VALVE                      |
| SV  | SOLENOID VALVE                    |
| G   | SPRINKLER ALARM (WMG)             |
| M   | EMERGENCY RELEASE STATION         |
| RN  | RESTRICTION NOZZLE (PRIMING LINE) |
| PS1 | LOW AIR ALARM PRESSURE SWITCH     |
| PS2 | WATER FLOW PRESSURE ALARM SWITCH  |

|    |                |
|----|----------------|
| ∇  | VALVE          |
| —  | BY USER        |
| ** | OPTIONAL       |
| ⌋  | STRAINER       |
| OD | OPEN DRAIN     |
| PG | PRESSURE GAUGE |

|      |                               |
|------|-------------------------------|
| ∇    | SWING CHECK VALVE             |
| ∇    | ANGLE VALVE                   |
| DPA  | DRY PILOT ACTUATOR            |
| RN-A | RESTRICTION NOZZLE (AIR LINE) |
| SCV  | SWING CHECK VALVE             |



**SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE  
MODEL - Fig 503 FOR HORIZONTAL MOUNTING**




## SCHEMATIC 12






## Fig 503 Deluge Valve

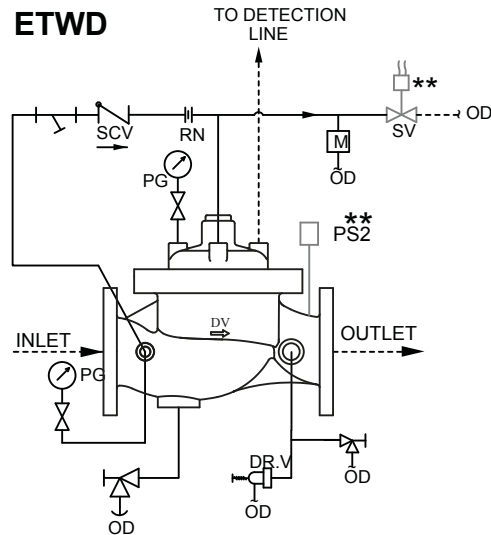**SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE  
MODEL - Fig 503 FOR HORIZONTAL MOUNTING**


SCHEMATIC 13

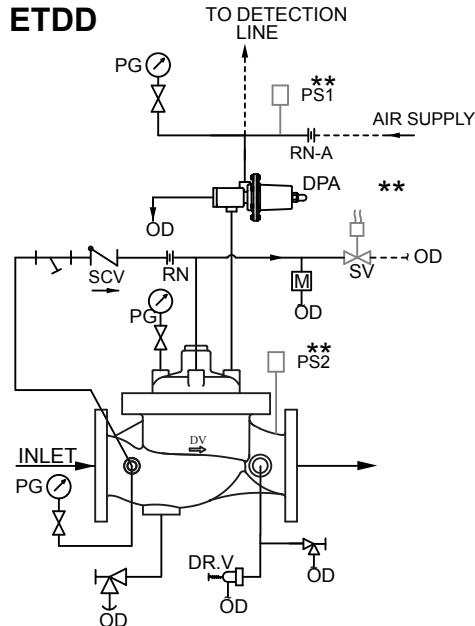**SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE  
MODEL - Fig 503 FOR HORIZONTAL MOUNTING**


SCHEMATIC 14

## ABBREVIATION &amp; SYMBOLS

|     |                                   |
|-----|-----------------------------------|
| DV  | DELUGE VALVE                      |
| SV  | SOLENOID VALVE                    |
| G   | SPRINKLER ALARM (WMG)             |
| M   | EMERGENCY RELEASE STATION         |
| RN  | RESTRICTION NOZZLE (PRIMING LINE) |
| PS1 | LOW AIR ALARM PRESSURE SWITCH     |
| PS2 | WATER FLOW PRESSURE ALARM SWITCH  |


|    |                |
|----|----------------|
| ∇  | VALVE          |
| —  | BY USER        |
| ** | OPTIONAL       |
| ⊥  | STRAINER       |
| OD | OPEN DRAIN     |
| PG | PRESSURE GAUGE |

|      |                               |
|------|-------------------------------|
| ∇    | SWING CHECK VALVE             |
| ∇    | ANGLE VALVE                   |
| DPA  | DRY PILOT ACTUATOR            |
| RN-A | RESTRICTION NOZZLE (AIR LINE) |
| SCV  | SWING CHECK VALVE             |




### Fig 503 Deluge Valve

#### SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR HORIZONTAL MOUNTING

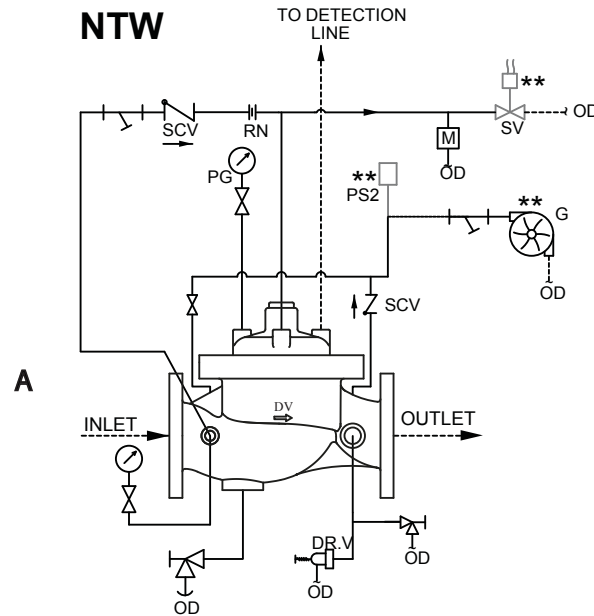

SCHEMATIC 15

#### SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - Fig 503 FOR HORIZONTAL MOUNTING

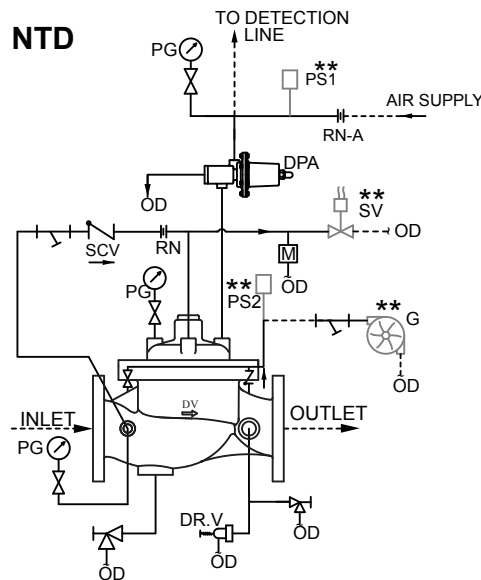

SCHEMATIC 16

#### ABBREVIATION & SYMBOLS

|     |                                   |
|-----|-----------------------------------|
| DV  | DELUGE VALVE                      |
| SV  | SOLENOID VALVE                    |
| G   | SPRINKLER ALARM (WMG)             |
| M   | EMERGENCY RELEASE STATION         |
| RN  | RESTRICTION NOZZLE (PRIMING LINE) |
| PS1 | LOW AIR ALARM PRESSURE SWITCH     |
| PS2 | WATER FLOW PRESSURE ALARM SWITCH  |


|  |                |
|--|----------------|
|  | VALVE          |
|  | BY USER        |
|  | OPTIONAL       |
|  | STRAINER       |
|  | OPEN DRAIN     |
|  | PRESSURE GAUGE |

|  |                               |
|--|-------------------------------|
|  | SWING CHECK VALVE             |
|  | ANGLE VALVE                   |
|  | DRY PILOT ACTUATOR            |
|  | RESTRICTION NOZZLE (AIR LINE) |
|  | SWING CHECK VALVE             |


## Fig 503 Deluge Valve

### SPRINKLER HEIGHT LIMITATION


**DV 200NB**

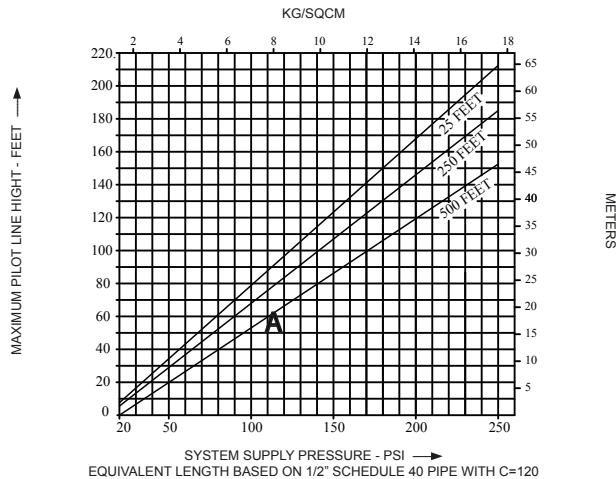


**DV 150NB**

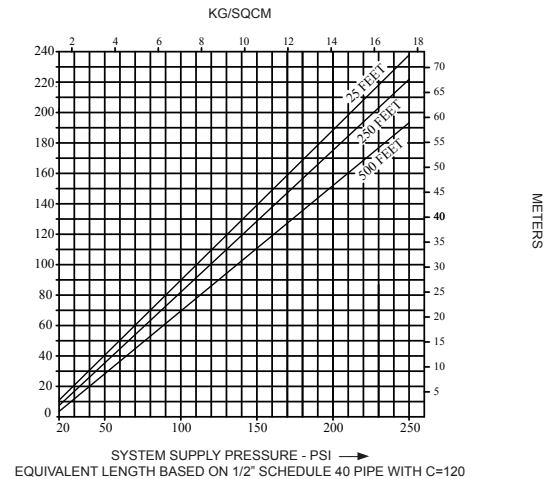


**DV 100NB**

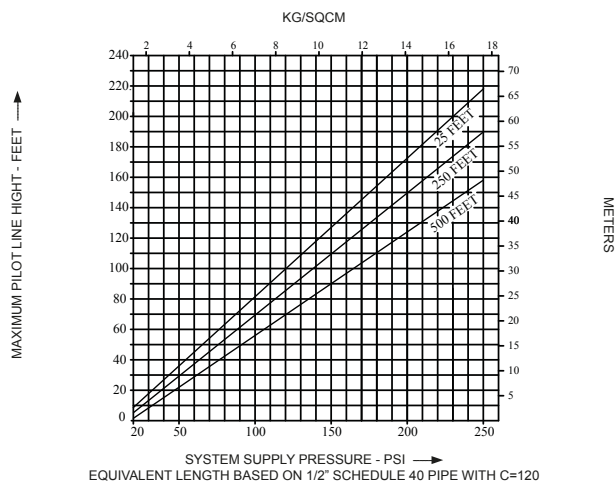

**DV 80NB**

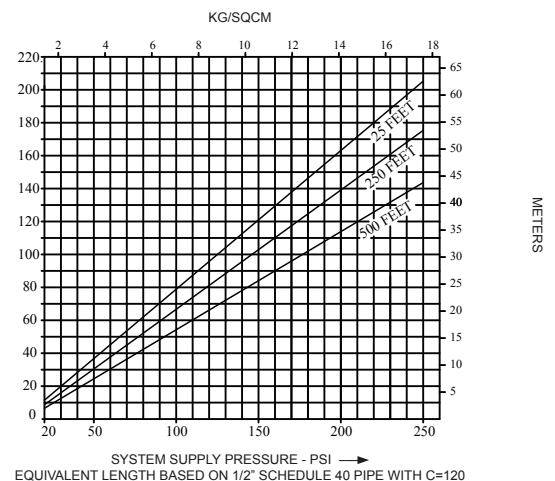

**DV - 50NB**

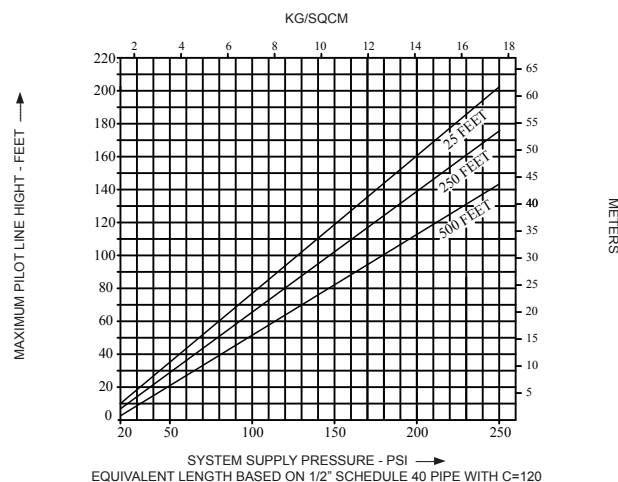

**Rapidrop Global**

Rometec srl - [www.rometec.it](http://www.rometec.it) - Rometec srl - [www.rometec.it](http://www.rometec.it) - Rometec srl - [www.rometec.it](http://www.rometec.it)

Tel: +44 (0) 1733 847 510 Fax: +44 (0) 1733 553 958


e-mail: [rapidrop@rapidrop.com](mailto:rapidrop@rapidrop.com) web: [www.rapidrop.com](http://www.rapidrop.com)

### Fig 503 Deluge Valve

#### DELUGE VALVE MODEL Fig 503

##### Nominal Pressure Loss vs Flow

(\* Flow at 15 feet per second [4.57 meter per second])

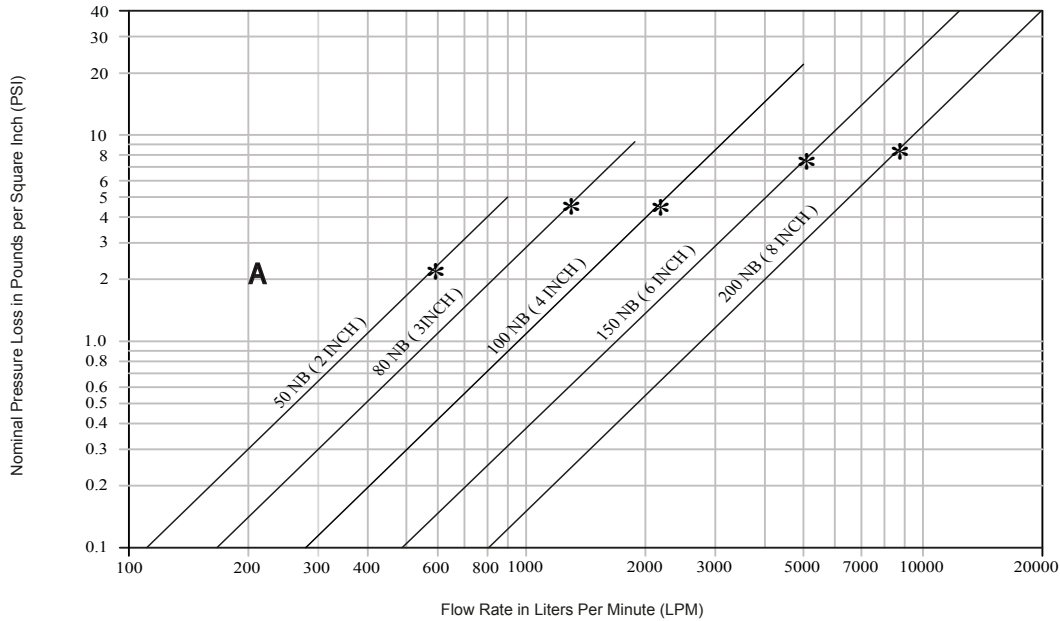

- \* 2.3 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 594 LPM thru 50NB DV
- \* 4.7 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 1308 LPM thru 80NB DV
- \* 4.7 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 2255 LPM thru 100NB DV
- \* 7.5 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 5117 LPM thru 150NB DV
- \* 8.4 PSI Pressure loss @ 15 feet per second (4.57 met/sec) velocity having flow of 8854 LPM thru 200NB DV

##### NOTICE :

The equipment presented in this bulletin is to be installed in accordance with the latest publication standards of NFPA or other similar organisations and also with the provision of government codes or ordinances wherever applicable.

The information provided by us are to the best of our knowledge and belief, and are general guidelines only. Site handling and installation control is beyond our reach. Hence we give no guarantee for result and take no liability for damages, loss or penalties whatsoever, resulting from our suggestion, information, recommendation or damages due to our product.

Product development is a continuous programme of Rapidrop Global Limited and hence the right to modify any specification without prior notice is reserved with the company.

Rapidrop Global

