
# Rometec srl - www.rometec.it - Rometec srl - www.rometec.it -

Without strainer Model 041-042 With strainer Model 043-044

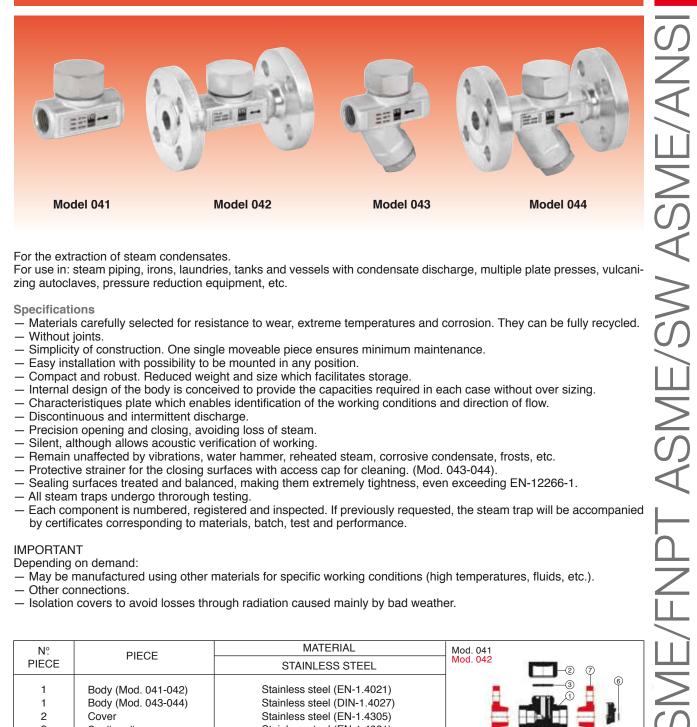

For the extraction of steam condensates.

For use in: steam piping, irons, laundries, tanks and vessels with condensate discharge, multiple plate presses, vulcanizing autoclaves, pressure reduction equipment, etc.

#### **Specifications**


- Materials carefully selected for resistance to wear, extreme temperatures and corrosion. They can be fully recycled.
- Without joints.
- Simplicity of construction. One single moveable piece ensures minimum maintenance.
- Easy installation with possibility to be mounted in any position.
- Compact and robust. Reduced weight and size which facilitates storage.
- Internal design of the body is conceived to provide the capacities required in each case without over sizing.
- Characteristiques plate which enables identification of the working conditions and direction of flow.
- Discontinuous and intermittent discharge.
- Precision opening and closing, avoiding loss of steam.
- Silent, although allows acoustic verification of working.
- Remain unaffected by vibrations, water hammer, reheated steam, corrosive condensate, frosts, etc.
- Protective strainer for the closing surfaces with access cap for cleaning. (Mod. 043-044).
- Sealing surfaces treated and balanced, making them extremely tightness, even exceeding EN-12266-1.
- All steam traps undergo throrough testing.
- Each component is numbered, registered and inspected. If previously requested, the steam trap will be accompanied by certificates corresponding to materials, batch, test and performance.


# **IMPORTANT**

## Depending on demand:

- May be manufactured using other materials for specific working conditions (high temperatures, fluids, etc.).
- Other connections.
- Isolation covers to avoid losses through radiation caused mainly by bad weather.

N°.	PIECE	MATERIAL								
PIECE	FILOL	STAINLESS STEEL								
1	Body (Mod. 041-042)	Stainless steel (EN-1.4021)								
1	Body (Mod. 043-044)	Stainless steel (DIN-1.4027)								
2	Cover	Stainless steel (EN-1 4305)								
3	Sealing disc	Stainless steel (EN-1.4021)								
4	Cap	Stainless steel (EN-1.4305)								
5	Strainer	Stainless steel (EN-1.4301)								
6	Plate	Stainless steel (EN-1.4301)								
7	Flanges	Carbon steel (EN-1.0460)								
	R	1/2" to 1"(GAS,NPT or SW)								
	DN	15 to 25 (EN,ANSI)								
	MAX. PERMISSIBLE PRESSURE	PMA . 63 bar								
OPERATING	MAX. WORKING PRESSURE	PMS . 42 bar								
CONDITIONS	MIN. WORKING PRESSURE	PmS . 0,25 bar								
tec srl -	WAX JOERNISSIBLE TEMPERATURE	- Rometec <sup>™</sup> MAl 4000 www.romete								

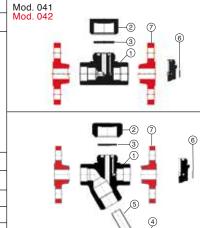



**Romet** PERMISSIBLE BACK PRESSURE Until 80% inlet pressure Rometec srl - www.rometec.it - Rometec srl - www.rometec.it - Rometec srl - www.rometec.it

ec srl - w	WW	.ron	nete	c.it	R	ome	ec s	rl -	W W 04:	<b>w.r</b> (	ome	tec.i	t - F	Rom	et
R1			1/2"	3/-		1"		1/2"	3/4	ļ"	1"				
CONNECT	IONS	NP.	T thread	-IRNA b	B2.1	drical fen		ead ISC	) 228/1	1978 (	DIN-259	9)			
Н			40,0	43	,5	51,5		40,5	43,	5	51,5				
H <sub>1</sub>			55,0	58	,5	70,5		55,5	58,	5	70,5				
h			16,0	19	,0	22,5		64,0	67,	5	70,0				
h <sup>1</sup>			_	_	-	_		75,0	78,	5	81,0				
L			70,0	80	,0	90,0		78,0	90,	0	95,0				
WEIGHT II	N Kg.		0,67	0,8	32	1,33	(	0,93	1,1	2	1,59				
CODE	GA	S 04	1.9022	041.9	342	041.9102	2 043	.9022	043.93	342 0	43.9102				
2108-	NP	T 041	.90221	041.93	3421	041.9102	1 043.	90221	043.93	421 0	43.91021	1			
2100	SV	V 041	.90222	041.93	3422	041.9102	2 043.	90222	043.93	422 0	43.91022	2			
c				Ĭ		m T		L		± ,	- E				
MODEL					042									044	
DN		15			20			25			15			20	
CONECTIONS								ges cla	ss 150	lbs AS	N-1092- ME/ANS ME/ANS	SI B16.			
Н	ı	II 75,0	III	Ī	II 88,5	III	Ī	II 96,5		Ī	75,0	III -	Ī	88,5	
<u>H1</u> L		130			150			160			75,0 130			78,5 150	
D D	95	90	95	105	100	115	115	110	125	95	90	95	105	100	1
K				75,00	69,90		85,00	79,40		65,00			75,00	69,90	
1	14,00	15,90	15,90	14,00	15,90	19,10	14,00	15,90	19,10	14,00	15,90	15,90	14,00	15,90	

MODEL	042								044									
DN	15 20				25		15			20			25					
	I - Flanges P								N-16 EN-1092-1									
CONECTIONS						ا	I - Flan	ges cla	ss 150	lbs ASI	ME/ANS	SI B16.	5					
	III - Flanges class 300							lbs ASME/ANSI B16.5										
	- 1	Ш	III	1	l II	III		II	III	- 1	- 11	III		ll .	III		ll l	III
Н		75,0			88,5			96,5			75,0 88,5					96,5		
H1											75,0			78,5		81,0		
L		130			150			160		130			150			160		
D	95	90	95	105	100	115	115	110	125	95	90	95	105	100	115	115	110	125
K	65,00	60,30	66,70	75,00	69,90	82,60	85,00	79,40	88,90	65,00	60,30	66,70	75,00	69,90	82,60	85,00	79,40	88,90
	14,00	15,90	15,90	14,00	15,90	19,10	14,00	15,90	19,10	14,00	15,90	15,90	14,00	15,90	19,10	14,00	15,90	19,10
b	16,00	11,60	14,70	18,00	13,20	16,30	18,00	14,70	17,90	16,00	11,60	14,70	18,00	13,20	16,30	18,00	14,70	17,90
N. OF DRILL HOLES		4			4			4		4 4 4								
WEIGHT IN Kg.	2,21	1,63	2,11	2,85	2,27	3,21	4,00	3,11	4,40	2,47	1,89	2,37	3,30	2,54	3,51	4,25	3,37	4,66
CODE 2108-042.	8022	80221	80222	8342	83421	83422	8102	81021	81022									
CODE 2108-044.										8022	80221	80222	8342	83421	83422	8102	81021	81022
		Mod. 04	2	ь	[-				•	Mod	d. 044	ь		[				
					<i>1000</i>		7	<b>7</b> ///2					٦ ,	1140800.		_ <u>_</u>		
				+-+-									_			I		
					~!!!!!		<u>}</u> ////////////////////////////////////					1 1 1						
			o X일									¥6 <u> </u>						
								44////										
													Ķ			 		
								7///								<u> </u>		
				1222		L		*////										


Rometec srl - www.rometec.it - Rometec srl - www.rometec.it - Rometec srl - www.rometec.it

# Rometec srl - www.rometec.it - Rometec srl - www.rometec.it - Rometec srl - www.rometec.it


Low pressure steam.

High pressure steam.


The operation of a thermodynamic steam trap is based on the Bernouilli principle: "In a fluid in motion, the sum of the static and dynamic pressures remains constant at all points, such that an increase in one results in a decrease in the other".

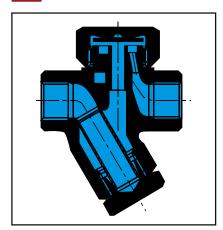

The input pressure acts on the sealing disc which allows the immediate discharge of the condensate and air at the temperature of the steam.

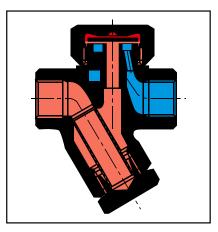


Subsequently the steam enters the steam trap. The high speed produced by the expansion of the steam creates a zone of low pressure in the inverse side of the sealing disc. The flow is deviated to the reverse of the sealing disc and creates a zone of high pressure by recompression. The sealing disc begins to descend.

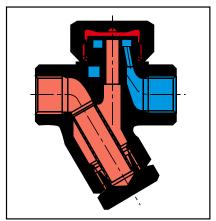

When the high pressure acts on the whole surface of the sealing disc it exerts a force greater than the input pressure. The steam trap closes. The subsequent presence of condensate on the input causes the cycle to be repeated.


#### Recommended

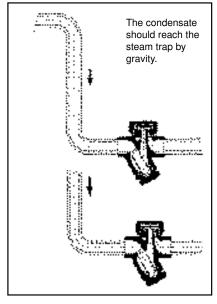


#### Installation


- Verify that the fluid circulates in the direction indicated by the arrow on the characteristics plate.
- Avoid excessive losses of load on the input, and counterpressures on the output by generously sizing the piping. The conductors should have at least the same internal diameter as the steam trap.
- In model 041-042, it is essential to locate an additional strainer before the steam trap.
- If a sight glass is installed after the steam trap leave about 50 cm between them.
- Each consumption point should have its own steam trap. A common steam trap will give rise to problems.
- The discharge of the steam trap to a consensate tank requires:
- A tank with a larger diameter than the steam trap or the sum of the nominal cross sections of the steam trap connected to it.
- The steam trap that operate at different pressures must discharge to different tanks.
- 3 The input of condensate to the tank must be done through its upper side.


### Not recommended

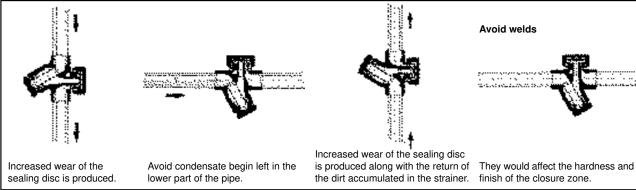



Rometec srl - www.rometec.it - Rometec srl - www.rometec.it - Rometec srl - www.rometec.it

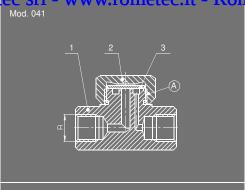

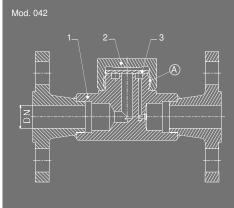

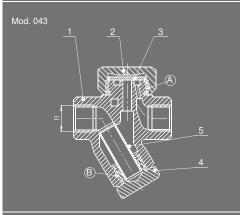

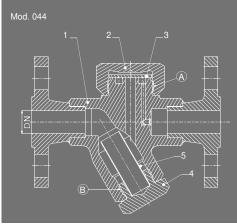

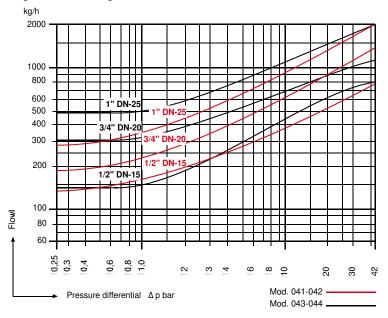

#### Start-up

- 1- On start up avoid air reaching the steam trap at high speed as it could block it.
- 2- The steam trap will remain open if the compression exceeds 80% of the input pressure.

#### Assembly and disassembly

- 1- Unscrew cover (2).
- 2- Take out the sealing disc (3).
- 3- Unscrew the cap (4).
- 4- Extract the strainer (5).
- 5- Locate the sealing disc (3), with the slots facing the seating in the body (1).
- 6- Put on the cover (2) after greasing the screw threads (A) and (B) with molybdenum bisulphate or other lubricant which is resistant to high temperatures. Tighten up to the recommended torque.
- 7- Clean the strainer thoroughly (5) and insert into the body (1).
- 8- Screw on the cap (4) greasing the screw threads as in point 6.

TORQUES FOR ROOM TEMPERATURE OF 20°C										
Nº PIECE	PIECE	R	DN	Nm						
2	Cover	1/2" and 3/4"	15 and 20	100						
2	Cover	1"	25	150						
4	Сар	1/2" to 1"	15 to 25	100						

#### Maintenance

Before carrying out any maintenance work: Depressurize the steam trap and the input pipe.

The strainer (5) should be cleaned regularly.

The sealing disc (3) and the body seat (1) can be rectified and lapped as long as the quantity of material removed, with respect to the original thickness, does not exceed 0.25 mm.

The sealing disc (3) is rectified and lapped on both sides. The slotted side must be facing the body in order that, through the turbulence generated, a delay in the closure of the steam trap is achieved meaning that the discharge of the condensate is at a temperature close to that of the steam.

