Rometec srl - www.rometec.it - info@rometec.it - Rometec srl - www.rometec.it - info@rometec.it

Liquid Actuated

NACOM'S PTFE LIQUID ACTUATED ASPIRATOR


is designed for efficient and rapid siphoning of hard to handle chemicals.


City or D.I water at pressures from 10-50 PSI or more will cause aspiration of viscous acids such as HF and H2SO4.

Machined from virgin PTFE, these rugged Aspirators may be ordered individually or in a kit form.



Specifications

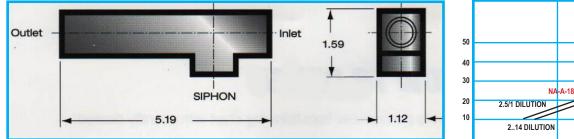

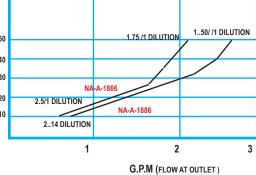

How to Order

Part Number	Description	Inlet Port	Siphon Port	
NA-A-1866	Aspirator 3/8 suction	3/8 FNPT	3/8 FNPT	1/2 FNPT
KNA-A-1866	Aspirator 3/8 suction Kit std. 1	3/8 FNPT	3/8 FNPT	1/2 FNPT
KNAA1866CHK	Aspirator 3/8 suction Kit w/ Chk valve	3/8 FNPT	3/8 FNPT	1/2 FNPT
KNAA1866PRO	Aspirator 3/8 suction Kit Poly ftgs	3/8 FNPT	3/8 FNPT	1/2 FNPT
AW-11866	Aspirator 3/8 suction Wand POLY			
	Aspirator 3/8 suction Wand POLY Aspirator 1/2 suction	3/8 FNPT	1/2 FNPT	1/2 FNPT
NA-A-1886		3/8 FNPT 3/8 FNPT	1/2 FNPT 1/2 FNPT	1/2 FNPT 1/2 FNPT
AW-11866 NA-A-1886 KNA-A-1886 KNAA1886CHK	Aspirator 1/2 suction			

AW-21886 Aspirator 1/2 suction Wand POLY

KIT 1 Aspirator 1866, Handle, 3 Teflon fitgs mounted on each port , and 8 feet of PTFE Tubing

KIT 2 Aspirator 1886 Handle, 2 Teflon fitgs mounted in let and outlet ports, a Teflon Check valve mounted to siphon port, and 8 feet of PTFE Tubing A typical Kit contains one ea PTFE ASPIRATOR, 3 PTFE Fittings, and 8 feet of PTFE Tubing

Rometec srl - www.rometec.it - info@rometec.it - Rometec srl - www.rometec.it - info@rometec.it

Air Actuated


NACOM'S AIR ACTUATED PTFE ASPIRATOR is designed for a smooth siphoning on hard to handle chemicals while eliminating chemical dilution common to the liquid actuated aspirators.

Since this unit economically operates on air , the media bgeing recirculated and re-cycled. In essance this aspirator acts as a low cost PTFE pumping device





Specifications

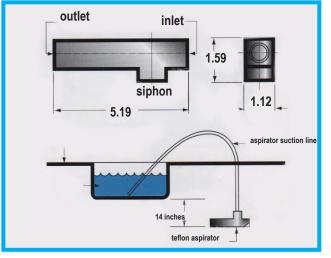

Air Pressure PSI	Suction recorded (Hg)
20	1.5
30	2.5
40	4.0
50	5.0
60	6.0

Model Tested : ANA-1866 Suction Recorded at outlet port

Model Tested : ANA-1866 Suction Recorded at Siphon Port

20	.5
30	.75
40	1.0
50	1.0
60	1.0

How to Order

		_		
Part Number	Description	INLET PORT	SIPHON PORT	OUTLET PORT
ANA-A-1866	Air Aspirator 3/8" Suction	3/8" FNPT	3/8" FNPT	1/2" FNPT
KANA-A-1866	Air Aspirator 3/8" Suction Kit	3/8" FNPT	3/8" FNPT	1/2" FNPT
KANA-A-1866CHK	Air Aspirator 3/8" Suction Kit w CHK	3/8" FNPT	3/8" FNPT	1/2" FNPT
KANA-A-1866PRO	Air Aspirator 3/8" Suction Kit w POLY Ftgs	3/8" FNPT	3/8" FNPT	1/2" FNPT
AW-18663	Wand 3/8" Poly			
ANA-A-1886	Air Aspirator 1/2" Suction	1/2" FNPT	1/2" FNPT	1/2" FNPT
KANA-A-1886	Air Aspirator 1/2 Suction Kit	1/2" FNPT	1/2" FNPT	1/2" FNPT
KANA-A-1886CHK	Air Aspirator 1/2" Suction Kit w CHK	1/2" FNPT	1/2" FNPT	1/2" FNPT
KANA-A-1886PRO	Air Aspirator 1/2" Suction Kit w POLY Ftgs	1/2" FNPT	1/2" FNPT	1/2" FNPT
AW-18864	Wand 1/2" Poly			