



## WSW SAMPLE COOLER FOR HIGH VISCOSITY/LOW PRESSURE DROP SERVICE

*Efficient sample cooling for high viscosity liquids and slurries*


### Features

- Fully drainable helical coil
- Low pressure drop

### Description


The WSW series sample cooler is designed for use in applications where drainability is critical but efficiency cannot be compromised. It's larger diameter sample tube makes it especially useful for high viscosity liquids and slurries. Optimal service for flows below 3000 cc/min for single phase heat transfer. Standard tube side material is 316/316L SS.

### Performance Curve - Water

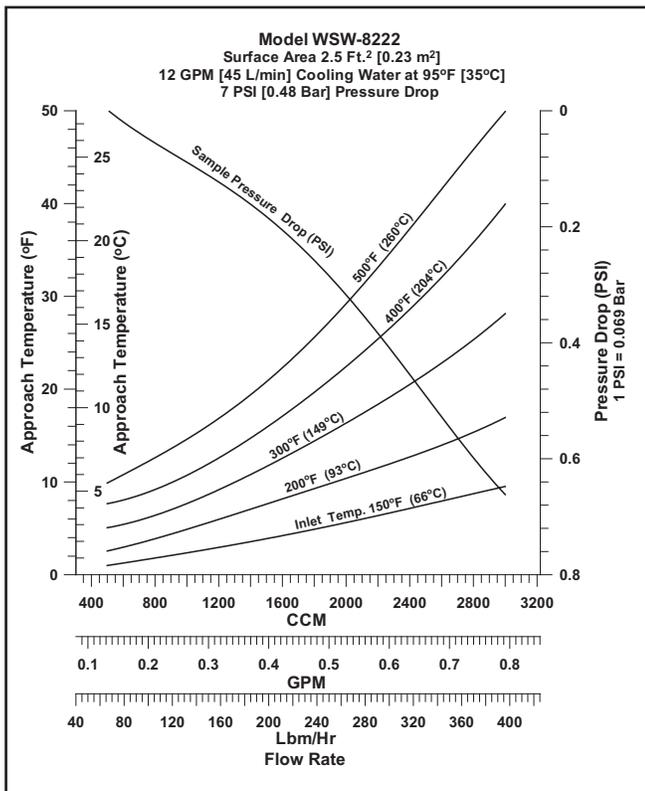

### NOTE:

Not recommended for steam condensing service. See TLF, FLF, FXF series sample coolers for this application.

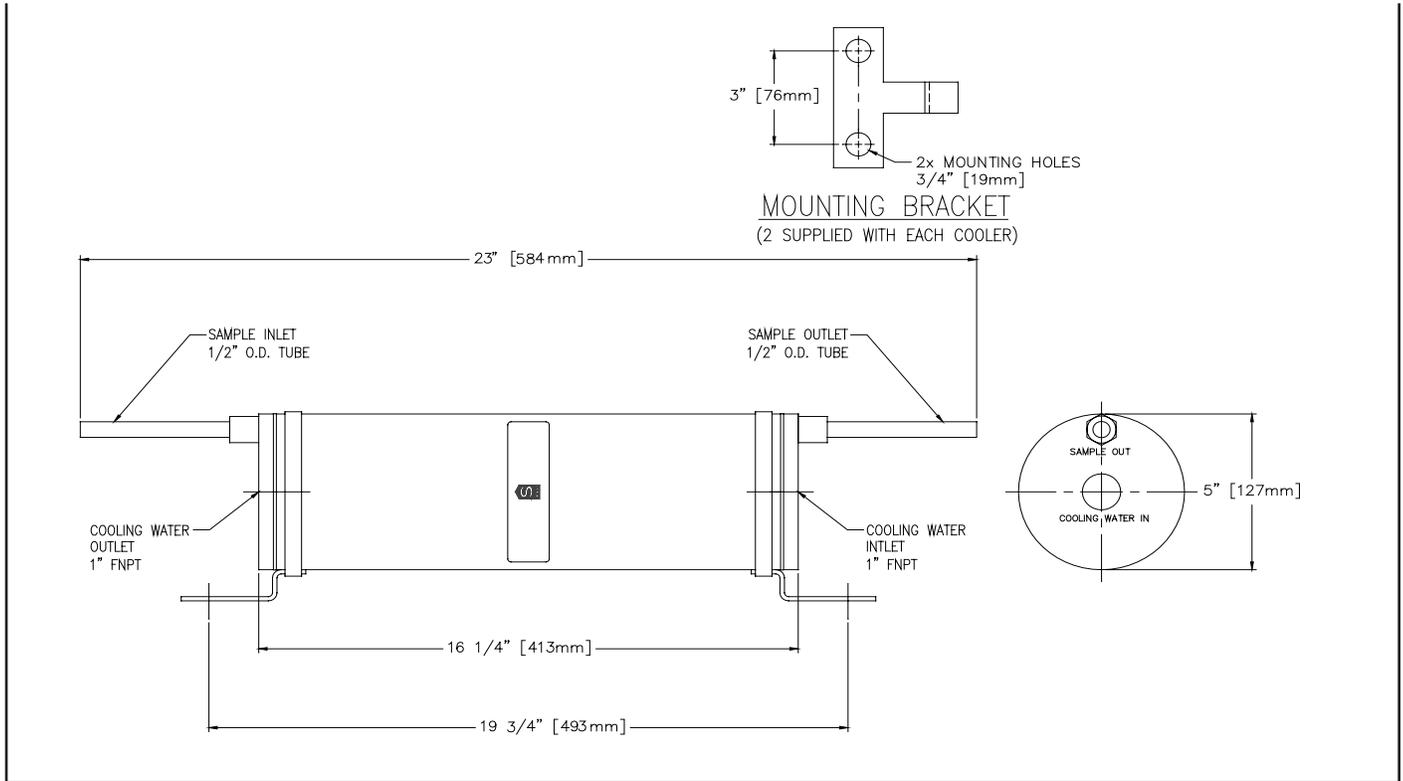

### Specifications – WSW Series

Model No.	Shell Design	Tube Design	Tube Material	Shell Material	Area	Weight	Part Number
WSW-8222	400 psi @ 350°F 27 bar @ 176°C	1200 psi @ 650°F 82 bar @ 343°C	316/316L SS 1/2" O.D. x 0.035"AW	304 SS	2.5 ft <sup>2</sup> 0.23 m <sup>2</sup>	25 lbs 11.5 kg	7-00712A
WSW-8222U	400 psi @ 350°F 27 bar @ 176°C	1200 psi @ 650°F 82 bar @ 343°C	316/316L SS 1/2" O.D. x 0.035"AW	304 SS	2.5 ft <sup>2</sup> 0.23 m <sup>2</sup>	25 lbs 11.5 kg	7-00712G

**NOTE:**

- U in model number denotes ASME stamped model.
- Canadian Registration Number available for ASME models only. Consult factory for CRN and other options and information.
- Vessels are exempt from CE marking per PED 97/23/EC. Vessels are below or equal to the limits set forth in Article 3, Sections 1.1, 1.2, 1.3 and Section 2 as applicable, and are designed and manufactured in accordance with sound engineering practice (meets the general requirements of the ASME Section VIII, Division 1, Boiler And Pressure Vessel Code). Nameplate will bear the name of Sentry Equipment Corp and safety instructions will be included per Article 3, Section 2.

**WARNING**

It is solely the responsibility of the end-user, through its own analysis and testing, to select products and materials suitable for their specific application requirements, ensure they are properly installed, safely applied, properly maintained, and limit their use to their intended purpose. Improper selection, installation, or use may result in personal injury or property damage.



**SENTRY EQUIPMENT CORP**

PO Box 127  
Oconomowoc, WI 53066 USA  
Phone: 262-567-7256  
Fax: 262-567-4523

**E-mail:**  
sales@sentry-equip.com

**Website:**  
www.sentry-equip.com

For further information, contact: